





















































































Application List - Opel / Version 9.6.1

Icons Legend

Existing Functionality    

Under Development 

Functionality does not apply 

ABS / ABR				
System	DTCs	Parameters	Actuators	Configurations
ABS BOSCH 2SE (+TC)				
ABS BOSCH 5 TC				
ABS BOSCH 5.3				
ABS LUCAS 415				
ABS LUCAS EBC 430				
ABS TEVES MK60 (CAN) ASTRA H				
ABS/ETC 5.3-5.4 (+TC)				
ABS/ETC 5.3-5.4 (+TC) (Astra-G)				
ABS/TC/ESP (ECU) ASTRA H MY 2004				
ABS/TC/ESP VECTRA C MY 2002				
<i>Configurations</i>				
AIRBAG (SRS)				
System	DTCs	Parameters	Actuators	Configurations
AIRBAG (CORSA-C/ MERIVA) MY 2001				
AIRBAG (SDM) (VECTRA C 2003/2006)				
AIRBAG (SDM) (VECTRA-C 2002)				
AIRBAG (SDM) (ZAFIRA-B)				
AIRBAG (SMD) MRSZ TEMIC (ASTRA H 2004/2005)				
AIRBAG (SRS)				
AIRBAG [E-LUX (VECTRA)]				
<i>Configurations</i>				
<i>ECU Program</i>				
<i>Erase recorded data</i>				
<i>Parametr pojazdu</i>				
<i>Read Variant Configuration</i>				
<i>VIN Code</i>				
AIRBAG S				
AIRBAG SAB6 (ASTRA G/ ZAFIRA) 1998-2000				
<i>Configurations</i>				
<i>Airbag - konfiguracja</i>				
<i>Airbag - konfiguracja</i>				
<i>Konfiguracja napinaczy</i>				
AIRBAG SAB8x (ASTRA G/ ZAFIRA) MY 2000				
<i>Configurations</i>				
<i>Airbag - konfiguracja</i>				
<i>Airbag - konfiguracja</i>				
<i>Courtain Airbag Configuration</i>				
<i>Konfiguracja bocznych poduszek</i>				
<i>Konfiguracja napinaczy</i>				
<i>Wykrycie zajęcia fotela</i>				
AIRBAG TEMIC 07 (CORSA-C/ MERIVA) MY 2001				
<i>Configurations</i>				
<i>Frontal Airbag</i>				
<i>Head Airbag</i>				
KONFIGURACJA				

Napinacz

Poduszka powietrzna boczna
Wykrycie zajęcia fotela

ALARM ANTYKRADZIEŻOWY

System	DTCs	Parameters	Actuators	Configurations
ALARM ANTKRADZIEŻOWY (ASTRA-G/ZAFIRA) (OPEL)				
<i>Configurations</i>				
ERASE REMOTE CONTROL KEYS PROGRAM REMOTE CONTROL KEYS				
ANTI THEFT WARNING (ASTRA-G) MY 2002 (GM)				
<i>Configurations</i>				
ERASE REMOTE CONTROL KEYS PROGRAM REMOTE CONTROL KEYS				
ANTI THEFT WARNING (S-10/ BLAZER)				
<i>Configurations</i>				
ERASE REMOTE CONTROL KEYS PROGRAM REMOTE CONTROL KEYS				
ANTI-THEFT ALARM (ZAFIRA) MY 2002 (GM)				
<i>Configurations</i>				
ERASE REMOTE CONTROL KEYS PROGRAM REMOTE CONTROL KEYS				
ANTI-THEFT ALARM 90				
ANTI-THEFT ALARM 95 (CORSA-B)				
ANTI-THEFT ALARM 98 (ASTRA-G) 1999-2001 (GM)				
<i>Configurations</i>				
ERASE REMOTE CONTROL KEYS PROGRAM REMOTE CONTROL KEYS				
ANTI-THEFT ALARM 98 (VECTRA-B)				
<i>Configurations</i>				
ERASE REMOTE CONTROL KEYS PROGRAM REMOTE CONTROL KEYS				
ANTITHEFT WARNING (CORSA-C) 2004/2006 (GM)				
<i>Configurations</i>				
ERASE REMOTE CONTROL KEYS PROGRAM REMOTE CONTROL KEYS				

ANTI THEFT / IMMOBILIZER

System	DTCs	Parameters	Actuators	Configurations
BLOKADA ROZRUCHU				
<i>Configurations</i>				
ERASE IGNITION KEY CODES IMMOBILIZER INICJALIZACJA Program extra key				
IMMOBILIZER (S-10/ BLAZER) MY 2001				
<i>Configurations</i>				
ERASE IGNITION KEY CODES ERASE REMOTE CONTROL KEYS IMMOBILIZER INICJALIZACJA Program extra key PROGRAM REMOTE CONTROL KEYS				
IMMOBILIZER II				
<i>Configurations</i>				
ERASE IGNITION KEY CODES IMMOBILIZER INICJALIZACJA IMMOBILIZER RESET INICJALIZACJA ECU SILNIKA Program extra key RESET ECU				

AUTOMATYCZNA SKRZYŃNIA BIEGÓW





























































System	DTCs	Parameters	Actuators	Configurations
AF 13 / 14 / 20				
AF 13-II / 17 / 20				
AF 13-II / 20 / 22 / 30				
AF 13-II/17/20/22 (ASTRA G/ZAFIRA) MY 1998				
AF 25 / 35				
AR 25 / 35				
MTA (Easytronic)				

BODY SYSTEM INTEGRATION

System	DTCs	Parameters	Actuators	Configurations
BODY CONTROL MODULE (VECTRA C 2002/2004))				
BODY CONTROL MODULE (VECTRA C 2005/2006)				
CONFORT MODULE (E-LUX) (MY 2009)				
Configurations				
Erase Remote Control Keys PROGRAM REMOTE CONTROL KEYS RESET ECU				
MODUŁ STERUJĄCY NADWOZIA (CORSA-C/MERIVA)				
Configurations				
Body Control Module Reset Dimming Instrument Illumination ERASE REMOTE CONTROL KEYS Interior Lights OPCJE KLIENTA PROGRAM REMOTE CONTROL KEYS Programm Vehicle Identification Number Reset Customer Configuration Ultrasound Module Configuration				
CENTRALNY ZAMEK				
System	DTCs	Parameters	Actuators	Configurations
CENTRALNY ZAMEK (ASTRA-G/ZAFIRA)				
Configurations				
ERASE REMOTE CONTROL KEYS PROGRAM REMOTE CONTROL KEYS Sun Roof Program Option				
CENTRALNY ZAMEK (VECTRA-B)				
Configurations				
ERASE REMOTE CONTROL KEYS PROGRAM REMOTE CONTROL KEYS				
CIM (MODUŁ KOLUMNY KIEROWNICZEJ)				
System	DTCs	Parameters	Actuators	Configurations
CIM (MODUŁ KOLUMNY KIEROWNICZEJ) ASTRA H 2004/2006				
ELEKTRONIKA SILNIKA (BENZYNĄ/DIESEL)				
System	DTCs	Parameters	Actuators	Configurations
BOSCH DDE 2.1 (X 25 DT)				
BOSCH EDC 15 C7 (Z 17 DTL)				
Configurations				
BOSCH EDC 15M (X 17 DTL)				
BOSCH EDC 15M (X 20 DTH)				
BOSCH EDC 15M (X 20 DTL) ASTRA G/ ZAFIRA				
BOSCH EDC 15M (X 22 DTH)				
BOSCH EDC 15M (Y 20 DTH) (ASTRA G/ ZAFIRA/ VECTRA B)				
Configurations				
VIN Code				
BOSCH EDC 15M (Y 22 DTR)				
BOSCH EDC 16 (Z 19 DTH) (VECTRA C)				
Configurations				
Delivery Mode Free Start Mode Fuel Consumption Correction Program High Speed CAN-Bus Configuration Program Tyre Circumference Replace Rail Pressure Sensor Replacement Lambda Sensor RESET ECU Reset Engine Oil Life Security Wait Time Stan immobilizera				
BOSCH EDC 16 C9 (Y 28 DTC) S-10				
Configurations				
Funkcja immobilizera zaprogramowana Program Variant Configuration RESET ECU Security Wait Time				

BOSCH EDC16 (Z 17 DTH) ASTRA H MY 2004				
BOSCH EDC16 (Z 17 DTL) ASTRA H MY 2004				
BOSCH EDC16 (Z 19 DT) VECTRA C (FAP) MY 2005				
BOSCH EDC16 (Z 19 DT) VECTRA C MY 2007				
BOSCH EDC16 C39 (2.0 L) CAPTIVA MY 2007				
BOSCH PSG16 (Y 20 DTH) VECTRA C MY 2002				
BOSCH PSG16 (Y 22 DTR) VECTRA C MY 2003				
DEC 30 (Z 17 DTH) (CORSA-C/MERIVA) MY 2004				
DELCO MT35E (Z16 XEP) (ASTRA H/ ZAFIRA B)				
DENSO V6 (Y 30 DT) VECTRA C 2003-2005				
ECOTRONIC				
EZ-PLUS				
HDCR (Y 17 DT) (ASTRA-G) 2000				
HDCR (Y 17 DT) (ASTRA-G) MY 2000				
Configurations				
<i>Funkcja immobilizera zaprogramowana</i>				
<i>Security Wait Time</i>				
HDCR (Y 17 DT) (CORSA C/MERIVA) MY 2004				
HDCR (Y 17 DTL) (CORSA-C) 2001-2003				
HDCR (Y 17 DTL) (CORSA-C) MY 2004				
L00EEA (Z 22 SE) (ZAFIRA) 2001-2005				
ME 3.1.1 (Y 26 SE) VECTRA B				
Configurations				
<i>Reset Learned Values</i>				
<i>Reset O2 Loop Block Learn Map</i>				
MOTOR 0100 (Z 22 SE) VECTRA C MY 2002				
MOTRONIC (X 20 SE/ X 24 SE) E-LUX (VECTRA)				
Configurations				
<i>CAN Configuration Programming</i>				
<i>Electronic Throttle Control</i>				
<i>Engine Speed Control (RPM)</i>				
<i>Funkcja immobilizera zaprogramowana</i>				
<i>Injectors flow cut test</i>				
<i>Konfigurowanie kodu VIN</i>				
<i>Lambda Sensor Reset</i>				
<i>Program Variant Configuration</i>				
<i>Reset Learned Values</i>				
<i>Security Wait Time</i>				
MOTRONIC (X 20 XE) (E20-E100) (E-LUX)				
Configurations				
<i>Electronic Throttle Control</i>				
<i>Engine Speed Control (RPM)</i>				
<i>Funkcja immobilizera zaprogramowana</i>				
<i>Injectors flow cut test</i>				
<i>Lambda Sensor Reset</i>				
<i>Reset Learned Values</i>				
<i>Security Wait Time</i>				
MOTRONIC (X 24 SE) (ASTRA-G)				
MOTRONIC (Z 10 XEP)				
Configurations				
<i>EGR Control</i>				
<i>Electronic Throttle Control</i>				
<i>Odciecie wtrysku</i>				
<i>Program Idle Speed</i>				
<i>Reset Learned Values</i>				
<i>Reset O2 Loop Block Learn Map</i>				
<i>RPM Control</i>				
<i>Wtryskiwacz 1</i>				
<i>Wtryskiwacz 2</i>				
<i>Wtryskiwacz 3</i>				
MOTRONIC (Z 12 XEP) (CORSA-C)				
MOTRONIC M 1.5				
MOTRONIC M 1.5.4 (C 20 NE)				
MOTRONIC M 1.5.4 (C 20 SE)				
MOTRONIC M 1.5.4 (C 20 SEL)				
MOTRONIC M 1.5.4 (C 20 XEV)				

MOTRONIC M 1.5.4 (C 22 NE)				
MOTRONIC M 1.5.4 (C 22 NE) Blazer				
MOTRONIC M 1.5.4 (C 22 SE)				
MOTRONIC M 1.5.5 (C 18 NE) ASTRA G 1999-2003				
MOTRONIC M 1.5.5 (C 18 YE)				
MOTRONIC M 1.5.5 (C 20 NE/C 20 SE) (8V) (E0/E20) (ASTRA-G)				
Configurations				
Engine Speed Control (RPM)				
Funkcja immobilizera zaprogramowana				
Idle Speed Air Control				
Lambda Sensor Reset				
Odcięcie wtrysku				
Programm ECU Initialisation Coding				
Reset IAC (Idle Air Control)				
Security Wait Time				
Wtryskiwacz 1				
Wtryskiwacz 2				
Wtryskiwacz 3				
Wtryskiwacz 4				
MOTRONIC M 1.5.5 (C 20 SE) (8V) (E0/E20) (ZAFIRA)				
MOTRONIC M 1.5.5 (C 20 SEL) (16V) (E0/E20) (ZAFIRA)				
MOTRONIC M 1.5.5 (C20SE/C20SEL) (16V) (E0/E20)				
Configurations				
Engine Speed Control (RPM)				
Funkcja immobilizera zaprogramowana				
Idle Speed Air Control				
Lambda Sensor Reset				
Odcięcie wtrysku				
Reset IAC (Idle Air Control)				
Security Wait Time				
Wtryskiwacz 1				
Wtryskiwacz 2				
Wtryskiwacz 3				
Wtryskiwacz 4				
MOTRONIC M 1.5.5 (X 10 XE)				
MOTRONIC M 1.5.5 (X 12 XE)				
MOTRONIC M 1.5.5 (Z 10 XE)				
Configurations				
BCM: Vehicle-ID is Programmed				
Funkcja immobilizera zaprogramowana				
Instrument: Status of Vehicle-ID				
Instrument: Vehicle-ID is Programmed				
Security Wait Time				
Status of Vehicle_ID (Body Control Module)				
MOTRONIC M 1.5.5 (Z 20 LET) (ASTRA G)				
Configurations				
Electronic Throttle Control				
Fuel Tank Ventilation Control				
Funkcja immobilizera zaprogramowana				
Odcięcie wtrysku				
Reset Learned Values				
Reset O2 Loop Block Learn Map				
Security Wait Time				
MOTRONIC M 2.5 (C 20 XE)				
MOTRONIC M 2.7 (C 20 LET)				
MOTRONIC M 2.8 (C 20 XE)				
MOTRONIC M 2.8.1 (C 41 GE)				
MOTRONIC M 2.8.1 (X 25 XE)				
MOTRONIC M 2.8.3				
MOTRONIC ME 1.5.5 (Z 12 XE)				
MOTRONIC ML 4.1				
MS 71 (Z 18 XE) (ASTRA G/ZAFIRA) MY 2001				
MS 71.5 (Z 18 XE) (VECTRA C) MY 2003				
MS 75 (Z 18 XER) ASTRA H MY 2006				
MS 81 - SIEM 0100 (Z 22 YH) (VECTRA-C)				

MSA 15 25 TDS (FRONTERA) MY 2007				
MULTEC (F)				
MULTEC (H) (C 10 NE) (SUZUKI FUN)				
Configurations				
CAN Configuration Programming Fuel Tank Ventilation Valve Funkcja immobilizera zaprogramowana Injectors flow cut test Programm Vehicle Identification Number Security Wait Time				
MULTEC (H) (C 14 SE)				
Configurations				
BCM: Vehicle-ID is Programmed Funkcja immobilizera zaprogramowana Instrument: Status of Vehicle-ID Instrument: Vehicle-ID is Programmed Security Wait Time Status of Vehicle_ID (Body Control Module)				
MULTEC (H) (C 18 SEL) (MERIVA) 2003-2005				
MULTEC (H) (T 18 NE)				
Configurations				
BCM: Vehicle Identification Programmed (Body Control Module) BCM: Vehicle Identification Status (Body Control Module) CAN Configuration Programming Control EGR Electronic Dashboard: Vehicle Identification Programmed Electronic Dashboard: Vehicle Identification Status Electronic Throttle Control Fuel Tank Ventilation Valve Funkcja immobilizera zaprogramowana Injectors flow cut test Program Variant Configuration Programm Vehicle Identification Number Security Wait Time				
MULTEC (H) (X 14 XE)				
MULTEC (H) (Y 14 NEL) (CORSA-B) MY 2009				
Configurations				
BCM: Vehicle Identification Programmed (Body Control Module) BCM: Vehicle Identification Status (Body Control Module) Electronic Dashboard: Vehicle Identification Programmed Electronic Dashboard: Vehicle Identification Status Electronic Throttle Control Fuel Tank Ventilation Valve Funkcja immobilizera zaprogramowana Injectors flow cut test Security Wait Time				
MULTEC (H) (Z 14 XE / Z 16 XE)				
Configurations				
EGR Control Electronic Throttle Control Fuel Tank Ventilation Control Immobiliser Function Programmed Injection Cut Off Security Wait Time Wtryskiwacz 1 Wtryskiwacz 2 Wtryskiwacz 3 Wtryskiwacz 4				
MULTEC (H) (Z 14 XE) (CORSA-C)				
Configurations				
BCM: Status Vehicle-ID BCM: Vehicle-ID is Programmed Funkcja immobilizera zaprogramowana Instrument: Status of Vehicle-ID Instrument: Vehicle-ID is Programmed Security Wait Time				
MULTEC (H) (Z 16 XE) (MERIVA/ZAFIRA) MY 2003				
MULTEC (H) (Z 16 XE) VECTRA C MY 2002				
MULTEC (H) (Z 16 XEP) ASTRA G				
MULTEC (U) (X 16 SZR) (ASTRA-G)				
MULTEC ACG(M) (14 SE / 16 LZ 2)				

MULTEC ACG(M) (C 14 SE)				
MULTEC ACG(M) (C 16 SE)				
MULTEC H (C 18 NE) (Corsa-C)				
MULTEC IEFI				
MULTEC M - Corsa				
MULTEC M (B 22 NZ)				
MULTEC S				
MULTEC SX (X16XEL)				
MULTEC SZ (X 12 SZ)				
MULTIJET 602 (Z 13 DTH) (ASTRA H) MY 2006				
MULTIJET 6J0/602 (Y 13 DT / Z 13 DT) CORSA C MY 2004				
MULTIJET 6J0/602 (Z 13 DTJ) MERIVA MY 2006				
SIMTEC 56.0				
SIMTEC 56.1				
SIMTEC 56.5 (C 18 SEL)				
SIMTEC 56.5 (C 20 SEL) (VECTRA-B) 1997 - 2001				
SIMTEC 56.5 (C 22 SEL)				
SIMTEC 56.5 (X 18 XE)				
SIMTEC 56.5 (X 20 XEV)				
SIMTEC MS 70 (X 18 XE1)				
SIMTEC MS 70 (X 20 XEV)				
SIMTEC MS 71 (Y 22 XE)				
Configurations				
<i>Funkcja immobilizera zaprogramowana</i>				
<i>Security Wait Time</i>				
SIMTEC MS 71 (Z 18 XE)				
SIMTEC MS 71 (Z 22 XE)				
Configurations				
<i>Funkcja immobilizera zaprogramowana</i>				
ELEKTRYCZNE SZYBY				
System	DTCs	Parameters	Actuators	Configurations
ELECTRIC WINDOW WINDER (MERIVA)				
ELEVALUNAS ELÉCTRICO (ZAFIRA) MY 2005				
PRZEDNI PODNOŚNIK SZYBY (ASTRA-G 1999-2005/ZAFIRA 2001-2005/CORSA-C MY 2002)				
MODUŁ CHŁODZENIA SILNIKA				
System	DTCs	Parameters	Actuators	Configurations
MODUŁ CHŁODZENIA SILNIKA (ASTRA-G/ZAFIRA)				
MODUŁ DRZWI KIEROWCY				
System	DTCs	Parameters	Actuators	Configurations
DDM (MODUŁ DRZWI KIEROWCY) VECTRA C				
MODUŁ DRZWI PASAŻERA				
System	DTCs	Parameters	Actuators	Configurations
PDM (MODUŁ DRZWI PASAŻERA) Vectra C 2002/2006				
MODUŁ MULTIMEDIALNY (EHU)				
System	DTCs	Parameters	Actuators	Configurations
EHU (MODUŁ MULTIMEDIALNY) ASTRA H 2004/2006				
PODNOŚNIK ELEKTRYCZNY TYLNEJ SZYBY				
System	DTCs	Parameters	Actuators	Configurations
PODNOŚNIK TYLNEJ SZYBY (ASTRA-G 1999-2005/ZAFIRA 2001-2005/CORSA-C 2002-2005)				
RADIO				
System	DTCs	Parameters	Actuators	Configurations
RADIO CAR 300				
RADIO CAR 400				
RADIO CDR 500				
REC (TYLNY ZESPÓŁ ELEKTRONICZNY)				
System	DTCs	Parameters	Actuators	Configurations
REC (TYLNY ZESPÓŁ ELEKTRONICZNY) ASTRA H 2004/2006				
TABLICA WSKAŹNIKÓW				
System	DTCs	Parameters	Actuators	Configurations

ELECTRONIC DASHBOARD (CORSA B/ C)				
<i>Configurations</i>				
Coolant Temperature Control				
Engine Speed Control				
Instantaneous Content of the Deposit Control				
KASOWANIE WSKAŹNIKÓW SERWISOWYCH				
Odometer Programmable				
Vehicle Speed Control				
ELECTRONIC DASHBOARD (ZAFIRA/E-LUX)				
<i>Configurations</i>				
Coolant Temperature Control				
Engine Speed Control				
Instantaneous Content of the Deposit Control				
KASOWANIE WSKAŹNIKÓW SERWISOWYCH				
Odometer Programmable				
Ustawienie czasu				
Vehicle Speed Control				
IPC (ZESTAW WSKAŹNIKÓW) (VECTRA-C) MY 2002				
IPC (ZESTAW WSKAŹNIKÓW) (VECTRA-C) MY 2006				
IPC ECU(STEROWNIK ZESTAWU WSKAŹNIKÓW)(ASTRA H 2004/2006)				
ZESTAW WSKAŹNIKÓW (ASTRA-G / ZAFIRA) MY 1998				
<i>Configurations</i>				
Instrument Service Reset				
ZESTAW WSKAŹNIKÓW (CORSA-C/MERIVA) MY 2002				
<i>Configurations</i>				
Instrument Service Reset				
ZESTAW WSKAŹNIKÓW (S-10/ BLAZER) MY 2001				
ZESTAW WSKAŹNIKÓW (VECTRA)				
<i>Configurations</i>				
Instrument Service Reset				
UEC (UNDERHOOD ELECTRICAL CENTRE)				
System	DTCs	Parameters	Actuators	Configurations
UEC (ASTRA H 2004/2006)				
<i>Configurations</i>				
WSPOMAGANIE KIEROWNICY				
System	DTCs	Parameters	Actuators	Configurations
ELECTRONIC POWER STEERING (AGILA 2002)				
ELECTRONIC POWER STEERING (CORSA-C)				
ELECTRONIC POWER STEERING (MERIVA) MY 2003				
<i>Configurations</i>				
Kalibracja				
ELEKTROHYDRAULICZNE WSPOMAGANIE KIEROWNICY (VECTRA C)				
<i>Configurations</i>				
ELEKTRYCZNE WSPOMAGANIE KIEROWNICY (ASTRA G/ ZAFIRA) MY 2000				
SERVOTRONIC				
WYŚWIETLACZ WIELOFUNKCYJNY / NAWIGACJA				
System	DTCs	Parameters	Actuators	Configurations
DISPLAY BID DELTA (ASTRA-H)				
<i>Configurations</i>				
MULTIPLE INFORMATION DISPLAY (ZAFIRA)				
TRIPLE INFO DISPLAY (E-LUX)				
<i>Configurations</i>				
TRIPLE INFORMATION DISPLAY				
TRIPLE INFORMATION DISPLAY (VECTRA-B)				